


Set Up of Ogawa Sampler

Insert U-shaped wire through holes in support clip, front to back, for attaching unit.

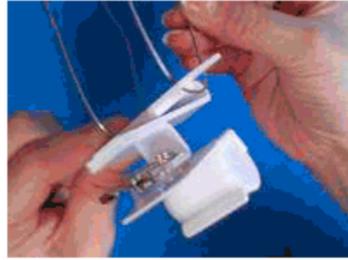

Attach shelter support clip by twisting wire-ends together.



Clip sampler to holder on shelter support.



Cover with shelter.



Permit to remain for determined sampling time.



Transport & Storage of Ogawa Sampler

Remove shelter and unclip sampler from shelter support.



Put exposed passive sampler into brown airtight vial.



Take to laboratory in airtight brown vial.



It is not necessary to use shelter indoors.

Do not forget to RECORD the time of start and finish of exposure. Total time of exposure should be in minutes. For most accurate results use average temperature and average humidity, during time of exposure should be included with record of exposure time.

Keep the exposed sampler protected from sunlight and high-temperatures. Ideally, storage should be in a household refrigerator.